


Installation Instructions

Ladder Rack Extension

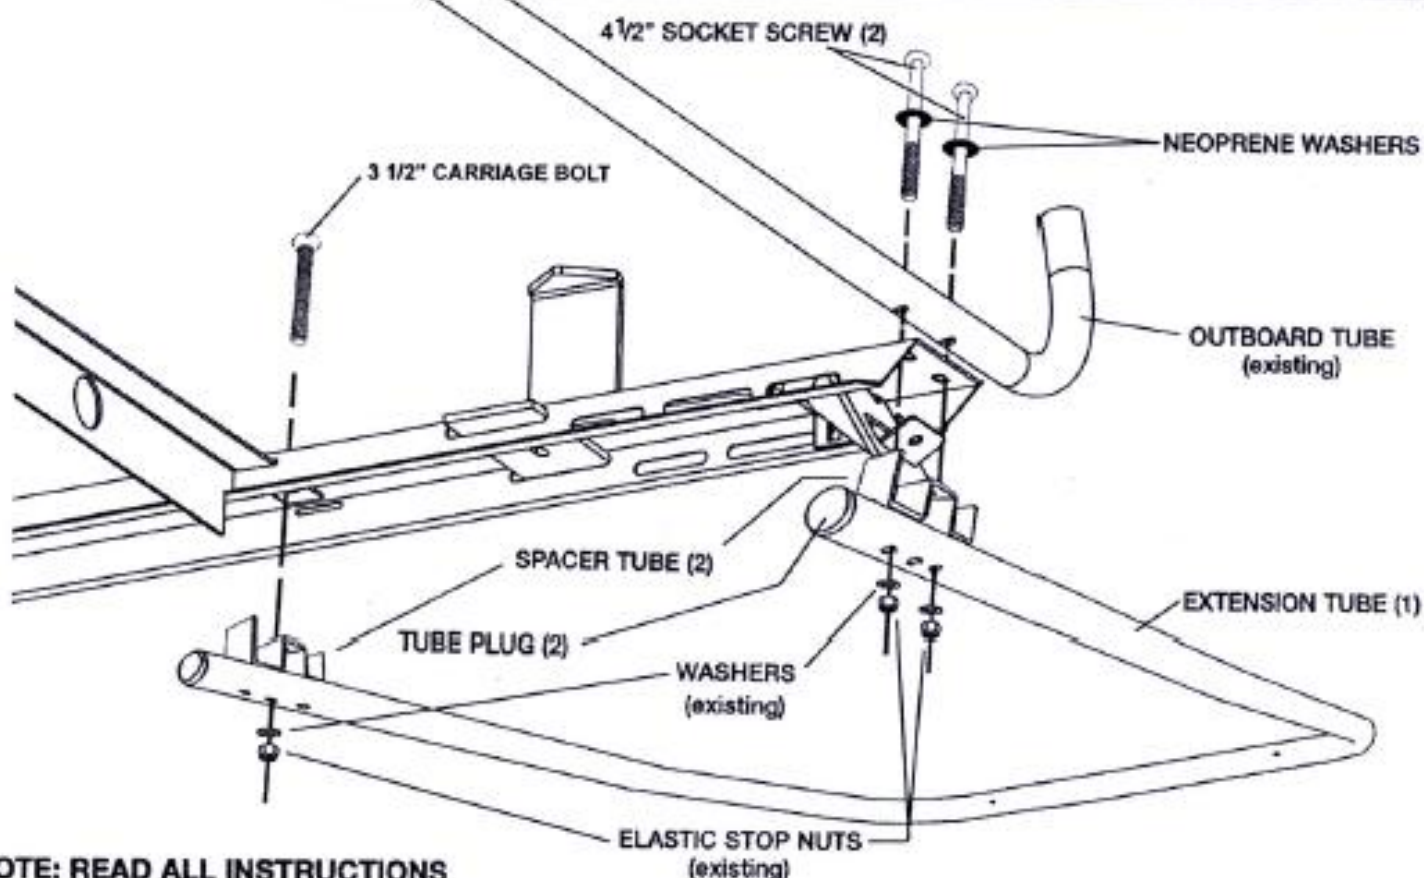

NOTE: READ ALL INSTRUCTIONS BEFORE ASSEMBLING.

STEP 1: If the Ladder Rack is assembled, remove the socket head screws at the front of the outboard tube and the carriage bolt at the front of the inner rail on the side the extension is to be mounted. Retain the elastic stop nuts, flat washers and neoprene washers for reinstallation.

NOTE: If the Ladder Rack is being assembled, add following two steps to the Ladder Rack instruction sheet Step 3 and Step 4.

STEP 2: Using the washers, elastic stop nuts and the 4 1/2" socket screws provided, secure the outboard tube, spacer tube, and the extension tube to the front crossbow as shown. Use neoprene washers at the top and the flat washers and elastic stop nuts at the bottom. Required tightening torque is 18 ft. lbs.

NOTE: The curved end of the extension tube should point upward.

STEP 3: Secure the opposite leg of the extension tube at the inner rail locations on the underside of the crossbow using a 3 1/2" carriage bolt provided and existing washer and nut. Required tightening torque is 18 ft. lbs.

STEP 4: Insert one tube plug into each end of the extension tube.

STEP 5: Optional cushions can be slipped onto the bearing surface of the extension.

3 Year / 36,000 Mile Limited Warranty

MASTERACK® commercial van and pickup equipment is warranted to be from defects in material and workmanship, under normal use and service for a period of one (1) year from date of purchase. Factory installations, and products installed in new vehicles by an authorized MASTERACK® installer are warranted for **(3) years or 36,000 miles (60,000 KM)**, whichever comes first. **This warranty covers only repairs, or at MASTERACKS' discretion, replacement to correct any defects related to materials and workmanship.**

This warranty does not apply to:

- Additions, alterations, or installations made by persons including dealers, other than MASTERACK® and its authorized distributors, made in accordance with MASTERACK® specifications and / or instructions, nor to defects arising out of attribute to such additions, alterations or installations.
- Defects attributable to abuse or misuse of the product, misapplication, negligent accident, modification or tampering.
- Damage resulting from failure to promptly notify and comply with the instructions of the dealer or manufacturer about defects when noted.
- Any incidental or consequential damages connected with a defect, either while under warranty or afterward, including the cost of a rental truck and / or loss or revenue.

THE WARRANTY IS THE ONLY WARRANTY APPLICABLE TO A MASTERACK PRODUCT PURCHASE. ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OR MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. MASTERACK® AND ITS SUBSIDIARIES, SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF ANY BREACH OF THIS WARRANTY, NOR SHALL THE DAMAGES EXCEED THE RETURN AMOUNT OF THE PURCHASE PRICE PAID BY THE ORIGINAL PURCHASER.

Warranty claims must be submitted to either your sales representative or a customer service representative at **1-800-222-8785**. The vehicle must be delivered to the original MASTERACK® authorized dealer for inspection and any warranty service. Any warranty service to be performed by a source other than MASTERACK® location or an approved MASTERACK® distributor must be authorized in advance of the repairs by the MASTERACK® Warranty Administrator and a purchase order issued by MASTERACK® in advance of repairs for the authorized repairs.